charnwood

C-SERIES

Operating & Installation Instructions

CONTENTS

OPERATING INSTRUCTIONS

Fuel 4
Fitting The Wood Ash Removal Grate 4
Lighting 5
Controlling The Fire 5
Refuelling 5
Ash Clearance 5
Reduced Burning 6
Maintenance 6
Throat Plate & Flueway Clearing 6
Chimney Sweeping 7
Trouble Shooting 7
CO Alarm 8
If you need further help 8

INSTALLATION INSTRUCTIONS

Health & Safety Precautions 9
Unpacking The Stove 9
CO Alarms 9
Specification 9
Chimney 10
Hearth & Fire Surround 10
Connection to Flues 11
Soot Doors 11
Pre Lighting Check 12
Commissioning 12
Clean Air Act Information 12
Certification 13
C-FOUR Dimensions 14
C-FIVE Dimensions 15
C-SIX Dimensions 16
C-SEVEN Dimensions 17
C-EIGHT Dimensions 18
C-FOUR Parts Lists 19
C-FIVE Parts Lists 20
C-SIX Parts Lists 21
C-SEVEN Parts Lists 22
C-EIGHT Parts Lists 23

Ref. C-Series blu v4 02.18

Congratulations on becoming the owner of a Charnwood C-Series Stove.

Before lighting the stove check with the installer that the work and checks described in the Installation Instructions have been carried out correctly and that the chimney has been swept, is sound and free from any obstructions. The stove is not suitable for use in a shared flue system.

Remember that the stove will be hot and that it is made from hard materials – ensure that you have good balance before operating the fire.

Do not use an aerosol spray on or near the stove when it is alight. There is a risk of explosion or flash ignition of the spray.

When using the stove in situations where children, aged and/or infirm persons are present a fireguard must be used to prevent accidental contact with the stove. The fireguard should be manufactured in accordance with BS 8423:2002.

The stove is suitable for intermittent operation.

FUEL

This stove has been designated to burn wood. Only dry well seasoned wood should be burnt on this appliance as burning wet unseasoned wood will give rise to heavy tar deposits in the stove, on the glass and within the chimney. For the same reason hard woods (such as Ash, Beech and Oak) are better than soft woods (such as Pine and Spruce). Burning wet unseasoned wood will also result in considerably reduced outputs. The wood should be cut and split and then left to season in a well ventilated dry place for at least one year but preferably two years before use. Approximate suitable log sizes are:

C4 & C6	255mm (10in) long and 75mm (3in) diameter
C5 & C8	305mm(12in) long and 75mm (3in) diameter
C7	380mm(15in) long and 75mm (3in) diameter.

Log moisture content of less than 20% is recommended.

PETROLEUM COKE IS NOT SUITABLE FOR USE ON THIS APPLIANCE. ITS USE WILL INVALIDATE THE GUARANTEE.

This stove is not designed to burn household waste.

For advice on other fuels please contact Charnwood.

FITTING THE WOOD ASH REMOVAL GRATE

Tools Required:

10mm Socket

Pozidriv screwdriver

Before fitting the wood ash removal grate (Fig. 1) remove the fuel retainer and the wood ash retainer. The wood ash retainer is not required when the riddling grate is fitted.

Undo the nut on the riddling blanking hole using a 10mm socket. Remove the cover and spacing washer (ensure you keep these in a safe place as you will need to replace them if the riddling grate is removed).

Feed the riddler rod through the hole on the right hand side of the stove, and slide one washer onto the rod. If there is not sufficient room to the right of the stove to do this, then remove the riddler knob, fit one washer over the rod and then slide the rod through the hole from the inside of the stove.

Fit the ash shedding plates through the slots on the LH & RH grate support.

Feed the rod through the LH & RH grate supports and slide the other washer on to the rod so that the washers end up outside the two side grate supports. . With the LH & RH grate supports pushed together fit the retaining clips so that the washers come inside the clips.

Slide the LH & RH grate supports apart so that they rest against the sides of the firebricks. Slot in the front and rear support plates.

Fit the grate plates into position through the front and rear grate support plates, making sure they locate correctly onto the riddler rod. Fit the fuel retainer. Slide the ashpan under the grate.

Fig.1. Optional wood ash removal grate

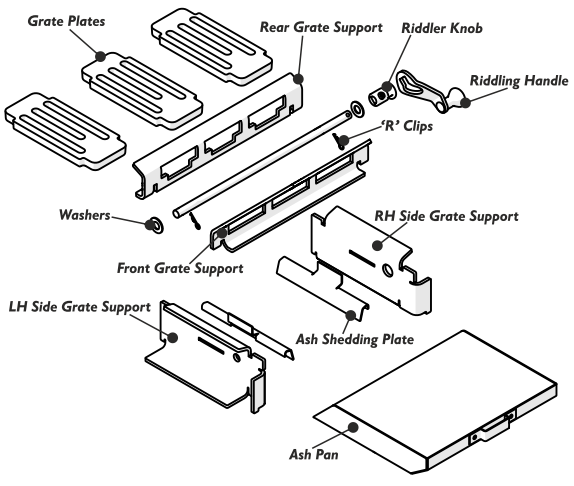

LIGHTING

On initial lighting, the stove may smoke and give off an odour as the silicon paint with which the firebox is painted reacts to the heat. This is normal and will cease after a short time, but meanwhile the room should be kept well ventilated.

At first only light a small fire and burn it slowly for two hours to allow any residual moisture in the chimney to evaporate.

Light the stove using dry kindling wood and paper or fire lighters. Put the paper, or fire lighters, and kindling in the firebox and cover with a few small dry logs. Open the air control fully (see Fig. 2). Light the paper or fire lighters. The door may be left cracked open for a few minutes to assist the combustion and heat up the firebox more quickly. When the kindling wood is well alight add a few more small logs, close the door but leave the air control fully open. When the flames are established around these logs, load the stove with the required fuel load. Maintain the air control at maximum at this stage. Once the fire is up to temperature the airwash system will begin to work, so allow the fire to become hot before adjusting the air control to the required setting. During the lighting period, do not leave the stove unattended. Do not leave the door open except as directed above to avoid excessive smoke.

When relighting the stove, leave the ash on the base if burning wood, unless it is becoming too deep, in which case some of it may be removed. If burning using the grate, clear the grate and empty the ashpan before relighting.

Fig.2. Stove Controls

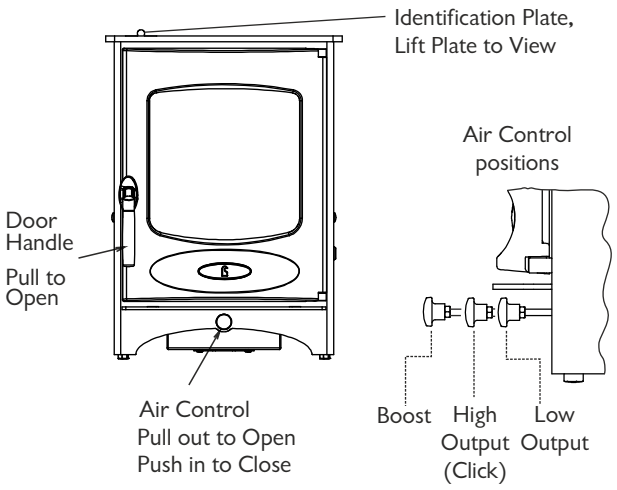

CONTROLLING THE FIRE

The rate of burning and hence the output is controlled by the air control (see Fig. 2).

Open the air control fully (boost position) when lighting or when rapid burning is required. It should not be left fully open for long periods as this can cause over-firing or excessive smoke production. For high output move the air control to the 'click position' or for low burning to the fully closed position.

When the fire is burning normally the air control gives enough airwash to keep the glass clean. However, it will not always be possible to keep the glass clean with the air control fully closed. For correct firing we recommend the use of a stove pipe thermometer which may be purchased from your supplier or from Charnwood.

REFUELLING

Keep the firebox well filled but do not allow fuel to spill over the top of the fuel retainer.

Logs should be evenly distributed, filling the firebed to give the most pleasing flame pattern. The air control must be fully opened after refuelling until the flames are established above the fire. It is best to refuel on to a hot bed of ash. If at this point the fire starts to die, the door must be cracked open until the fire is revived. If the fire has started to die down before refuelling, then more kindling wood must be added, the air control opened fully and the door cracked open to re-establish the firebed before adding larger logs (see suitable log sizes in Fuel section). This will avoid excessive smoke emission.

Care should be taken, especially when burning wood, that fuel does not project over the fuel retainer or damage to the glass may be caused when the door is closed. It can also cause the glass to blacken up. Maximum filling height is such that logs cannot fall from the fire when the door is opened and avoids excessive smoke emission.

ASH CLEARANCE

If the optional wood ash removal kit is fitted, the ashpan should be emptied regularly before it becomes too full. Never allow the ash to accumulate in the ashpan so that it comes in contact with the underside of the grate as this will seriously damage the grate bars. The ashpan is handled using the tool provided. Care should be taken to ensure that ash is cool before emptying it into plastic liners or bins.

To make ash removal easier there is a special Charnwood ash carrier available. This may be purchased from your supplier or, in case of difficulty, from Charnwood.

REDUCED BURNING

For reduced burning the fire door must be closed.

When burning wood in areas that are not smoke controlled, load some large logs on the fire and allow to burn for half an hour before closing the air control (this will help to reduce tar deposits in the chimney). Some experimentation may be necessary to find the setting most suitable for the type of fuel being used and the draw on the chimney.

To revive the fire, empty the ashpan (if optional wood ash kit is fitted), riddle the fire, and open the air control to maximum. When the fire is burning well load on more fuel as necessary and adjust the air control to the desired setting.

MAINTENANCE

Cleaning

The stove is finished with a high temperature paint which will withstand the temperatures encountered in normal use. This may be cleaned with a damp lint-free cloth when the stove is cold. Should re-painting become necessary, high temperature paints are available from your supplier or from stove shops.

Cleaning the Glass

Most deposits on the glass may be burnt off simply by running the fire at a fast rate for a few minutes. If it becomes necessary to clean the glass then open the door and allow it to cool. Clean the glass using a damp cloth and then wiping over with a dry cloth. Any stubborn deposits on the glass may be removed with a proprietary stove glass cleaner or ceramic hob cleaner. Do not use abrasive cleaners or pads as these can scratch the surface which will weaken the glass and cause premature failure

When Not in Use

If the fire is going to be out of use for a long period (for instance in the summer) then to prevent condensation, and hence corrosion, the air control should be left fully open and the fire door left ajar. It Is also advisable to sweep the chimney and clean out the fire. Spraying the inside of the door and firebox with a light oil, such as WD40, will also help to keep all internal parts working well. After long periods where the fire has been out of use, the chimney and appliance flueways should be cleaned before lighting.

Door Seals

For the fire to operate correctly it is important that the door seals are in good condition. Check that they do not become worn or frayed and replace them when necessary.

Servicing

It is recommended that the fire is serviced once a year to keep it in first class working order. After cleaning out the firebox thoroughly, check that all internal parts are in good working order, replacing any parts that are beginning to show signs of wear. Check that the doors seals are in good condition and that the door seals correctly. A servicing guide is available on request. Repairs or modifications may only be carried out by the Manufacturer or their approved agents. Use only genuine Charnwood replacement parts.

THROAT PLATE AND FLUEWAY CLEANING

It is important that the throat plate and all the stove flueways are kept clean in order to prevent potentially dangerous fume emission. They should be cleaned at least monthly, and more frequently if necessary. It is necessary to let the fire out to carry out these operations.

To remove the throat plate, push it up so that it clears the back brick, then slide it either right or left so that the opposite side clears the top of the side brick and can be gently lowered. Any sooty deposits should then be swept from the plate and into the fire.

Return the throat plate to its correct position- At an angle, insert the throat plate so that it sits on top of either the right or left side brick. Raise the opposite side and slide so that the throat plate is central and supported by both side bricks. Slide back so that the throatplate rests neatly on the top of the back bricks.

The upper throat plate (C4, C6 & C8 only) rests on top of the air wash tubes (Fig.3)

Fig.3. Throat Plate Position and Lowering

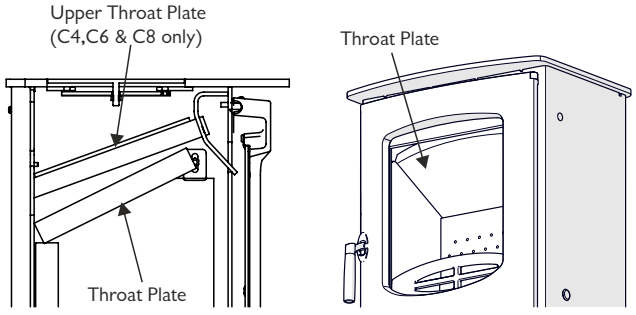

CHIMNEY SWEEPING

Where the chimney previously served an open fire, it is possible that the higher flue gas temperature from a stove may loosen soot deposits with the consequent risk of flue blockage. It is therefore recommended that the chimney be swept a second time within a month of regular use after installation.

The chimney should be swept at least twice a year. Where the top outlet or vertical rear flue connector is used it will generally be possible to sweep the chimney through the appliance.

First remove the fuel retainer and the throat plate. Then sweep the chimney ensuring that soot is removed from all horizontal surfaces after sweeping.

In situations where it is not possible to sweep through the appliance the installer will have provided alternative means, such as a soot door. After sweeping the chimney the appliance flue outlet and the flue pipe connecting the stove to the chimney must be cleaned with a flue brush.

After clearing any soot from within the stove, replace the throat plate (see Fig. 3) and the fuel retainer.

Different types of sweep's brushes are available to suit different flueways. For prefabricated insulated chimneys the manufacturers instructions with regard to sweeping should be consulted.

TROUBLE SHOOTING

Fire Will Not Burn

Check that:
a) the air inlet is not obstructed in any way,
b) chimneys and flueways are clear,
c) a suitable fuel is being used,
d) there is an adequate air supply into the room,
e) an extractor fan is not fitted in the same room as the stove.
f) there is sufficient draw in the chimney. Once the chimney is warm a draught reading of at least 1.25 mm (0.05 in.) water gauge (12Pa) should be obtained.

Blackening of Door Glass

Differences in chimney draughts mean that the best settings of the air controls will vary for different installations. A certain amount of experimentation may be required, however the following points should be noted and with a little care should enable the glass to be kept clean in most situations:

a) Wet or unseasoned wood, or logs overhanging the front fence will cause the glass to blacken.

b) The airwash relies on a supply of heated air to keep the glass clean, therefore, when lighting the stove allow the firebed to become well established before closing the air control. This may also be necessary when re-fuelling the stove.

c) When re-fuelling keep the fuel as far back from the front fence as possible, do not try to fit too much fuel into the firebox.

d) Do not completely close the air control.

It is always more difficult to keep the glass clean when running the stove very slowly for long periods.

If blackening of the glass still occurs check that all flue connections and the blanking plate are well sealed. It is also important that the chimney draw is sufficient and that it is not affected by down-draught. When the chimney is warm a draught reading of at least 1.25 mm (0.05 in.) water gauge (12Pa) should be obtained. Some blackening of the glass may occur below the level of the fuel retainer. This will not obscure the view of the fire or affect its performance.

Fume Emission

Warning Note:
Properly installed and operated this appliance will not emit fumes. Occasional fumes from de-ashing and re-fuelling may occur. Persistent fume emission is potentially dangerous and must not be tolerated. If fume emission does persist, then the following immediate actions should be taken:

a) Open doors and windows to ventilate the room and then leave the premises.

b) Let the fire out and safely dispose of the fuel from the appliance.

c) Check for flue or chimney blockage, and clean if required.

d) Do not attempt to re-light the fire until cause of fuming has been identified, if necessary seek professional advice.

The most common cause of fume emission is flueway or chimney blockage. For your own safety these must be kept clean.

Fire blazing out of control

Check that:

a) The door is tightly closed.
b) The air control slider is fully closed.
c) A suitable fuel is being used.

d) Door seals and airwash slide are intact.

Chimney Fires

If the chimney is thoroughly and regularly swept, chimney fires should not occur. However, if a chimney fire does occur close the air control, and tightly close the door of the appliance. This should cause the chimney fire to go out in which case the controls should be kept closed until the stove has gone out. The chimney and flueways should then be cleaned. If the chimney fire does not go out when the above action is taken then the fire brigade should be called immediately. After a chimney fire the chimney should be carefully examined for any damage. Expert advice should be sought if necessary.

CO ALARM

Your installer should have fitted a CO alarm in the same room as the appliance. If the alarm sounds unexpectedly, follow the instructions given under "Warning Note" above.

IF YOU NEED FURTHER HELP

If you need further help with your Charnwood then your Installer will be able to provide the answers to most questions. Your Local Charnwood Premier Dealer has a great deal of experience and will also be able to provide helpful advice. Further help is available from the Charnwood Customer Services department who will be pleased to give advice, if necessary.

HEALTH AND SAFETY PRECAUTIONS

Please take care when installing the stove that the requirements of the Health and Safety at Work Act 1974 are met.

Some types of fire cement are caustic and should not be allowed to come into contact with the skin. In case of contact wash with plenty of water.

If there is a possibility of disturbing any asbestos in the course of installation then please use appropriate protective equipment.

There must not be an extractor fan fitted in the same room as the stove as this can cause the appliance to emit fumes into the room.

There must be an adequate air supply into the room in which the appliance is installed to provide combustion air. The combustion air supply must be via a permanently open vent. The requirement for minimum free area is partly dependent on the design air permeability of the house. In older properties the air permeability will be above 5.0$m^3/(h.m^2)$, but in some modern properties it may be less. The vent must be positioned such that it is not liable to blockage. Minimium areas are given in the following table:

Air Permeability $m^3/(h.m^2)$	*Minimum Vent Area $cm^2(in^2)$*				
	C-Four	*C-Five*	*C-Six*	*C-Seven*	*C-Eight*
> 5.0	*No Requirement*	*No Requirement*	*9.4 (1.5)*	*11 (1.76)*	*16.5 (2.6)*
<5.0	*27.5 (4.3)*	*27.5 (4.3)*	*36.9(5.7)*	*38.5 (6.0)*	*44 (6.8)*

This stove is capable of intermittent operation, and is not suitable for use in a shared flue system.

A fixed ducted air supply may be used as an alternative to the traditional method of using a permanent open vent into a room to supply air for combustion.

External air supply kits are available please contact Charnwood for more information.

In addition to these instructions the requirements of BS.8303 and BSEN 15287-1:2007 must be fulfilled. Local Authority Bylaws and Building Regulations, including those referring to national and European Standards, regarding the installation of Solid Fuel burning appliances, flues and chimneys must also be observed.

UNPACKING THE STOVE

The stove arrives bolted and shrink-wrapped to its pallet. There must be adequate facilities for unloading and manoeuvring into position.

The wrapping is first removed, then the stove released from the pallet by either removing the single bolt (C-4) or 4 pallet bolts(C-5 to C-8) using a 10mm spanner. The pallet brackets can now be removed from the stove by tilting it and using a 13mm spanner to remove the bolts. These 4 bolts are required for levelling or fixing on the Store Stand or High legs. The Stove may now be moved to its final position. The pallet is intended to be cut up and used for kindling fuel.

CO ALARMS

Building regulations require that whenever a new or replacement fixed solid fuel or wood/biomass appliance is installed in a dwelling a carbon monoxide alarm must be fitted in the same room as the appliance. Further guidance on the installation of the carbon monoxide alarm is available in BS EN 50292:2002 and from the alarm manufacturer's instructions. Provision of an alarm must not be considered a substitute for either installing the appliance correctly or ensuring regular servicing and maintenance of the appliance and chimney system.

SPECIFICATION

The outputs in the table are based on a 45 minute re-fuelling cycle burning seasoned hardwood logs. All tests are carried out in accordance with BSEN 13240.

Specification	C-Four*	C-Five	C-Six	C-Seven	C-Eight
Nominal Heat Output kW (BTU/hr)	*4.9 (16,400)*	*5.0 (17,000)*	*5.9 (20,100)*	*7.1 (25,900)*	*8.3 (28,300)*
Stove Weight kg (Packed)	*83*	*96*	*96*	*115*	*119*
Flue Temperature °C	*252*	*247*	*243*	*280*	*316*
Minimum Flue Draught	*12Pa*	*12Pa*	*12Pa*	*12Pa*	*12Pa*
Flue gas Mass Flow g/s	*4.0*	*4.2*	*5.1*	*7.3*	*6.3*
Hearth Temperature °C	*51.6*	*69.9*	*88.1*	*55.4*	*53.4*
Minimum distance from combustibles mm	*500 side 370 rear*	*500 side 400 rear*	*500 side 500 rear*	*500 side 500 rear*	*600 side 650 rear*

**The results will be marginally reduced if the grate kit is fitted*

CHIMNEY

In order for the appliance to perform satisfactorily the chimney height must not be less than 4 metres measured vertically from the outlet of the stove to the top of the chimney. The internal dimensions of the chimney should preferably be 175 mm (7") or 200mm (8") either square or round and MUST NOT BE LESS THAN 125 mm (5") for C-Four and C-Five or 150mm (6") for C-Six, C-Seven and C-Eight.

If an existing chimney is to be used it must be swept and checked, it must be in good condition, free from cracks and blockages, and should not have an excessive cross sectional area. If it was previously used by an open fire then the chimney should be swept one month after installation to clear any soot falls which may have occurred due to the difference in combustion between the stove and the open fire. If you find that the chimney is in poor condition then expert advice should be sought regarding the necessity of having the chimney lined. If it is found necessary to line the chimney then a lining suitable for Solid Fuel must be used.

If there is no existing chimney then a prefabricated block chimney or a twin walled insulated stainless steel flue to BSEN 15287-1:2007 can be used either internally or externally. These chimneys must be fitted in accordance with the manufacturers instructions and Building Regulations.

Single wall flue pipe is suitable for connecting the stove to the chimney but is not suitable for using for the complete chimney. If it is found that there is excessive draw in the chimney then a draught stabiliser should be fitted.

It is important that there is sufficient draw in the chimney and that the chimney does not suffer from down-draught. When the chimney is warm the draw should be not less than 1.25mm (0.05") water gauge (12 Pa). If in doubt about the chimney seek expert advice.

HEARTH AND FIRE SURROUND

The stove must stand on a fireproof hearth and must not be situated closer than the minimum distance from combustible materials (see specification table) to the sides or rear above hearth level unless adequately fireproofed in accordance with local building regulations. The hearth must be of fireproof material and at least 12mm (1/2in.) thick. The positioning of the stove and the size of the hearth are governed by building regulations for Class 1 appliances. These building regulations state that the hearth must extend in front of the stove by at least 225mm (9 in.) and to the sides of the stove by at least 150mm (6 in.). When the fire door is open, it extends beyond

Fig. 4. Vertical Register Plate With Bricked Up Fireplace

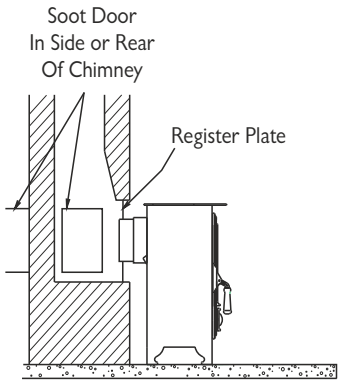

Fig. 5. Horizontal Register Plate With Rear Flue Connection

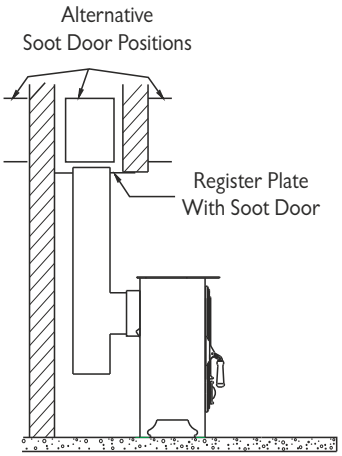

Fig. 6 Horizontal Register Plate With Top Flue Connection

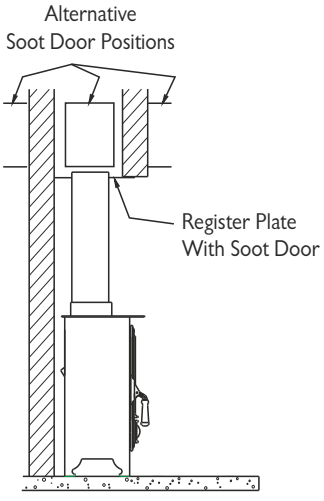

Fig. 7. Horizontal Register Plate With Optional Vertical Rear Flue Connector

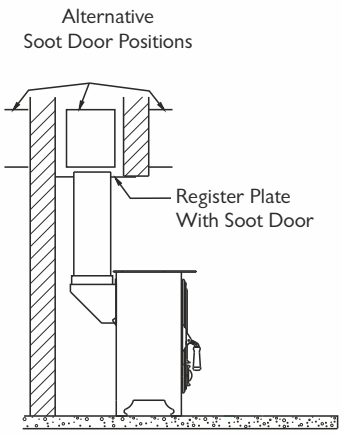

the flat front of the stove by the following amounts:

C-Four & C-Six 365mm, C-Five 436mm, C-Seven 515mm, and C-Eight 450mm.

If in doubt as to the positioning of the stove, expert advice should be sought either from the supplier or the local building inspector. The fireplace must allow good circulation of air around the appliance to ensure that maximum heat is transferred to the room and also to prevent the fireplace from overheating. A gap of 150mm (6") each side and 300mm (12") above the appliance should give sufficient air circulation. If a wooden mantelpiece or beam is used in the fireplace it should be a minimum of 460mm (18"), and preferably 600mm (24") from the appliance. In some situations it may be necessary to shield the beam or mantelpiece to protect it.

In order for the fire to operate correctly and to allow for access, there must be an air gap behind the appliance of at least 75mm, but be aware that this distance will need to be greater in some cases to meet Building Regulation requirements.

The appliance should be installed on a floor with adequate load-bearing capacity. If an existing construction does not meet this requirement then please take suitable measures to achieve this. (e.g. load distributing plate.)

CONNECTIONS TO FLUES

The stove must be connected to the flue using flue pipe of the following sizes:

Stove Model C-Four & C-Five.....125mm (5") i/d pipe.

Stove Model C-Six, C-Seven & C-Eight.....150mm (6") i/d pipe.

Fig. 8. Flue Blanking Plate.

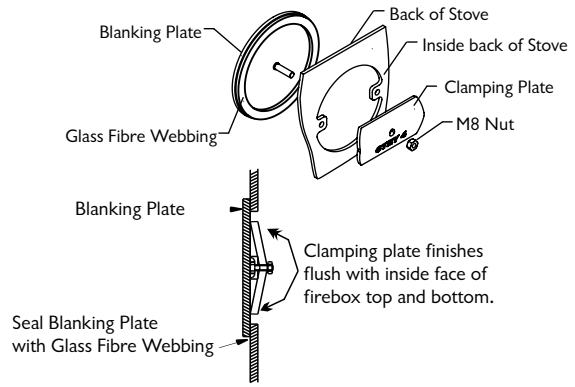

This may be stainless steel, cast iron, or thick wall steel pipe. Straight lengths of Charnwood Pipe to match the stove are available if required.

There are several ways of connecting the stove to the flue. These are illustrated in Figs. 4 to 7.

If the top flue connection or optional vertical rear flue connector is used then the chimney may be swept through the appliance.

Horizontal lengths of flue must be kept to a minimum and should not be more in length than the flue diameter.

The stove comes with the blanking plate fitted to the top flue outlet. The seal for the **top** outlet is a 180mm dia ring of rope seal. The seal for the **rear** outlet is a length of adhesive backed fibre webbing supplied with instructions. This is applied to the flue collar or the Vertical Rear Flue adapter for rear outlet installations. For top outlet installations, the blanking plate must be removed, have the webbing fitted to its sealing face, and fitted to the rear flue outlet. Ensure that the fold on the clamping plate is in line with the lugs on the firebox as shown in Fig 8. Ensure that the clamping plate does not prevent the throat plate from seating correctly. All flue connections must be well sealed.

SOOT DOORS

It is possible to pass a 16 inch diameter sweeps brush through the appliance but in most back outlet installations it will be necessary to have a soot door to enable the chimney to be swept. The optional vertical rear flue connector does allow the chimney to be swept through the stove. Soot doors may either be in the actual brickwork of the chimney or in the register plate. Various positions of soot doors are shown in Figs. 4 to 7.

PRE LIGHTING CHECK

Ensure that the throat plate is fitted in the roof of the appliance. The location and positioning of the throat plate is shown in Fig. 3.

Check that the front fence is fitted correctly and that the door closes properly.

COMMISSIONING

On completion of the installation allow a suitable period of time for the fire cement and mortar to dry out before lighting the fire. If no grate is fitted make a layer of ash or sand on the base of the stove before lighting. Check to ensure that smoke and fumes are taken from the appliance up the chimney and emitted safely. Also check all joints and seals. On completion of the installation and commissioning please leave the operating instructions with the customer and advise them on the use of the appliance.

CAA AND SMOKE CONTROL

The Clean Air Act 1993 and Smoke Control Areas

Under the Clean Air Act local authorities may declare the whole or part of the district of the authority to be a smoke control area. It is an offence to emit smoke from a chimney of a building, from a furnace or from any fixed boiler if located in a designated smoke control area. It is also an offence to acquire an "unauthorised fuel" for use within a smoke control area unless it is used in an "exempt" appliance ("exempted" from the controls which generally apply in the smoke control area).

In England appliances are exempted by publication on a list by the Secretary of State in accordance with changes made to sections 20 and 21 of the Clean Air Act 1993 by section 15 of the Deregulation Act 2015. Similarly in Scotland appliances are exempted bypublication on a list by Scottish Ministers under section 50 of the Regulatory Reform (Scotland) Act 2014.

In Northern Ireland appliances are exempted by publication on a list by the Department of Agriculture, Environment and Rural Affairs under Section 16 of the Environmental Better regulation Act (Northern Ireland) 2016.

In Wales appliances are exempted by regulations made by Welsh Ministers.

Further information on the requirements of the Clean Air Act can be found here: https://www.gov.uk/smoke-control-area-rules

Your local authority is responsible for implementing the Clean Air Act 1993 including designation and supervision of smoke control areas and you can contact them for details of Clean Air Act requirements.

The C-Four Blu, C-Five Blu, C-Six Blu, C-Seven Blu and C-Eight Blu have been recommended as suitable for use in smoke control areas when burning wood logs.

All C-Series models are designed to meet Clean Air Act requirements for smoke control exemption.

charnwood

CE

A.J WELLS & SONS LTD

18

Bishops Way, Newport, Isle of Wight PO30 5WS, United Kingdom

A Division of A.J.Wells & Sons Limited Registered in England No. 03809371

CE Certificate for compliance with EN13240:2001

blu

EN13240:2001

C-SERIES

ROOMHEATERS FIRED BY SOLID FUEL

Roomheater Model	**C Four***	**C Five**	**C Six**	**C Seven**	**C Eight**
EC Certificate of conformity no:	BRE44-CPD-2015	NRE44-CPD-2015	CRE44-CPD-2015	ERE44-CPD-2015	DRE44-CPD-2015
Fuel type:	WOOD LOGS	WOOD LOGS	WOOD LOGS	WOOD LOGS	WOOD LOGS
Emission of CO in combustion products:	0.08%	0.06%	0.07%	0.07%	0.07%
Mean flue gas temperature:	252°C	247°C	243°C	266°C	263°C
Space heating thermal output:	4.9kW	5.0kW	5.9kW	7.1kW	8.0kW
Energy efficiency	82%	82%	82%	79%	81%
Minimum distance to combustible materials Side: Rear:	 500mm 370mm	 500mm 400mm	 500mm 500mm	 500mm 500mm	 600mm 650mm
With heat shield and HT+ insulated flue connector (25mm insulation). Side: Rear:	 500mm 175mm	 500mm 175mm	 500mm 200mm	 500mm 240mm	 550mm 250mm
Particles (mg/m^{3n})	16	30	33	25	30
Fulfilled requirements: BStV of the City of Munich and the City of Regensburg FBStVO of the City of Aachen and the City of Düsseldorf 1.and 2. level of 1. BImSchV of Germany	✓	✓	✓	✓	✓

**The results will be marginally reduced if the grate kit is fitted*

C-FOUR DIMENSIONS (mm)

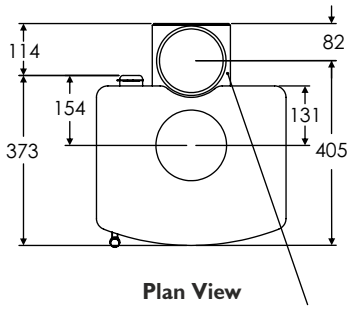

Plan View

Optional Vertical Rear Flue Adapter

140 i/d to suit 125mm (5") flue pipe

Standard Model

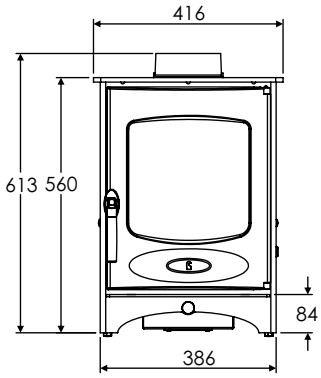

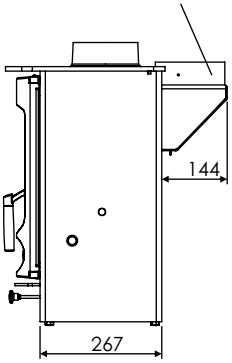

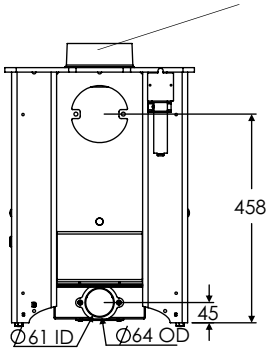

Store Stand

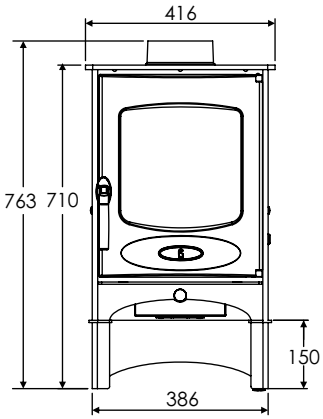

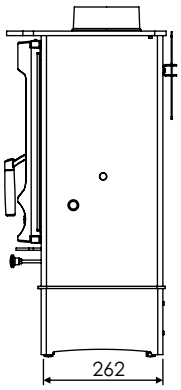

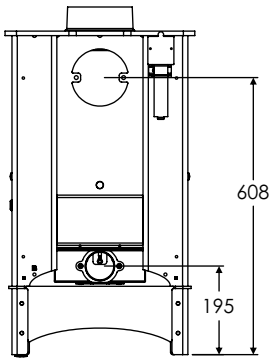

High Leg

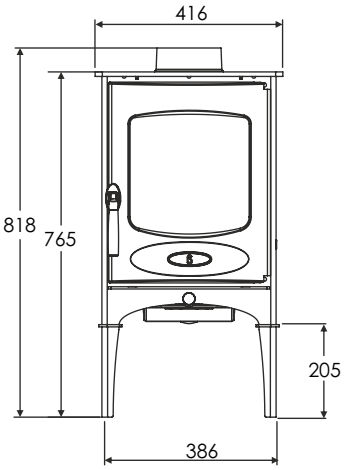

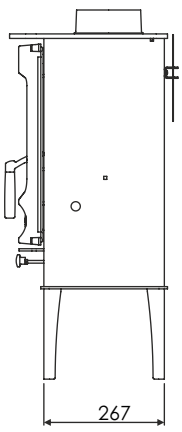

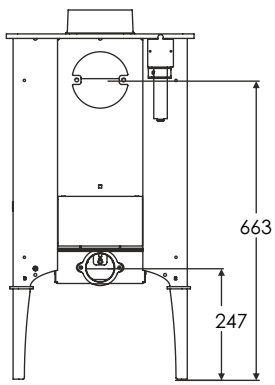

Front **Side** **Rear**

C-FIVE DIMENSIONS (mm)

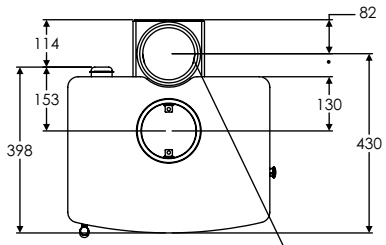

Plan View

Optional Vertical Rear Flue Adapter

140 i/d to suit 125mm (5") flue pipe

Standard Model

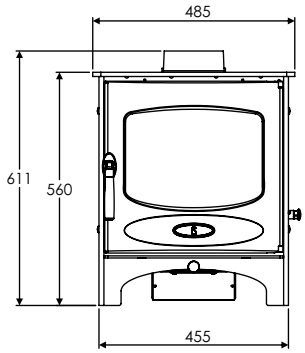

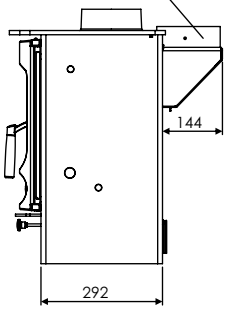

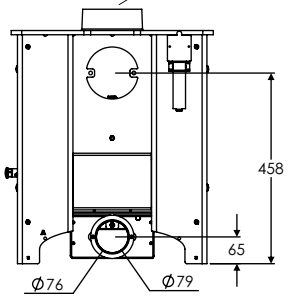

Store Stand

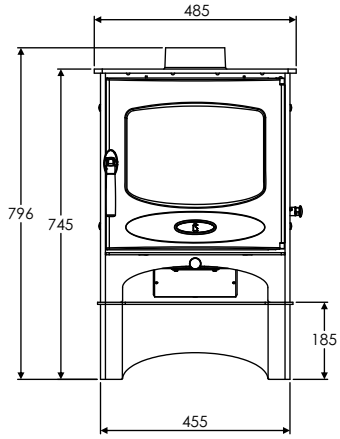

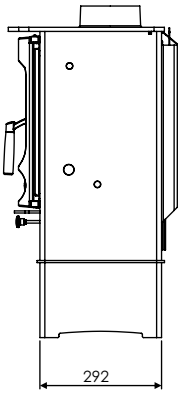

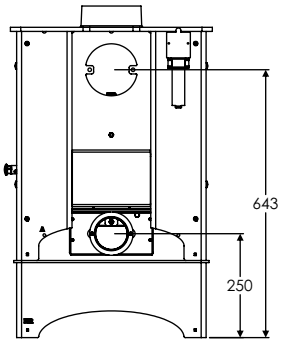

High Leg

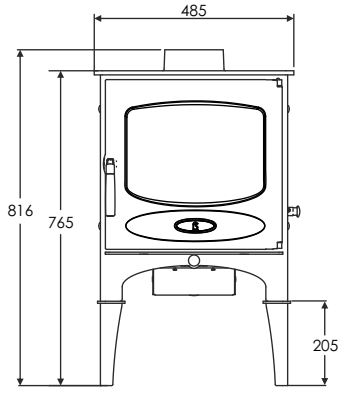

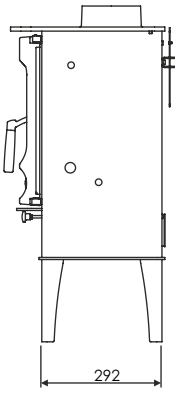

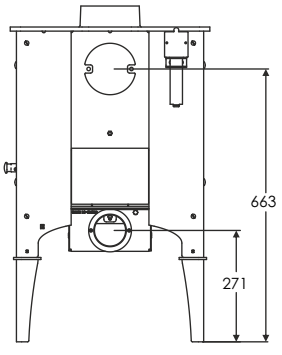

Front **Side** **Rear**

C-SIX DIMENSIONS (mm)

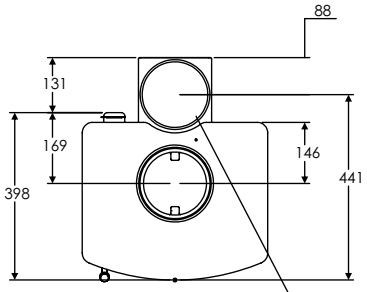

Plan View

Optional Vertical Rear Flue Adapter

156 i/d to suit 150mm (6") flue pipe

Standard Model

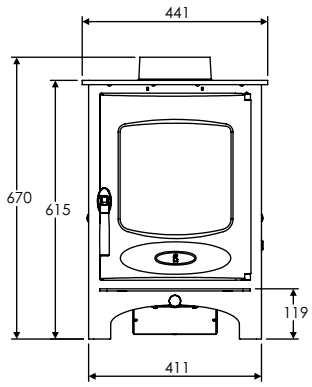

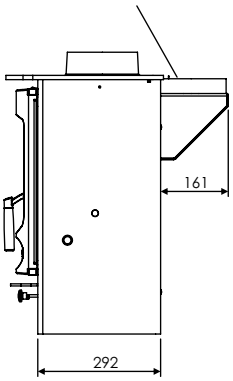

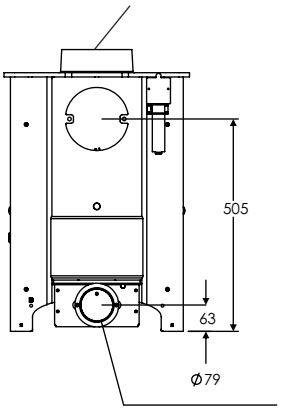

Store Stand

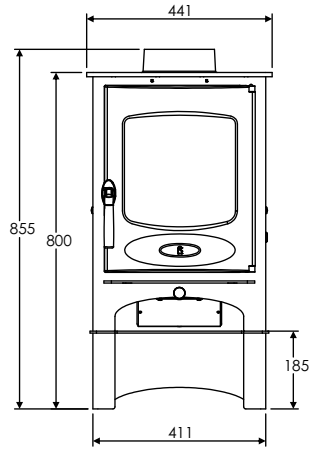

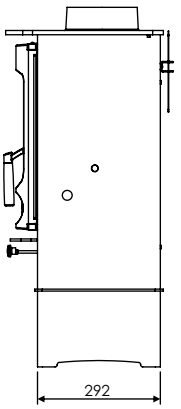

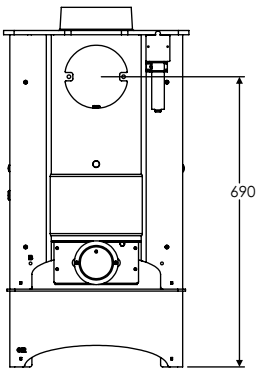

High Leg

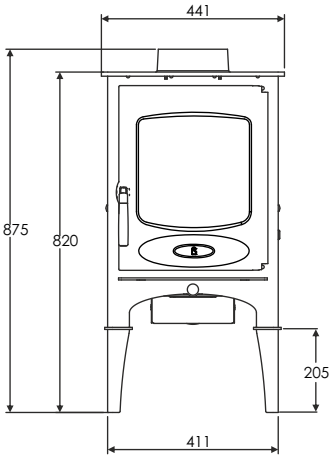

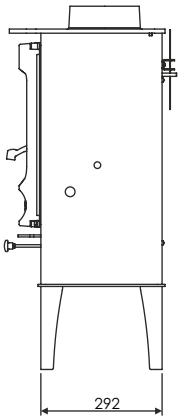

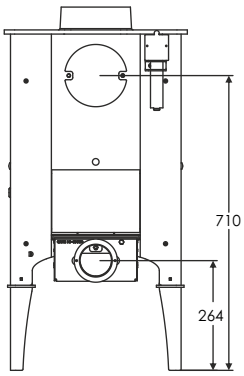

Front **Side** **Rear**

C-SEVEN DIMENSIONS (mm)

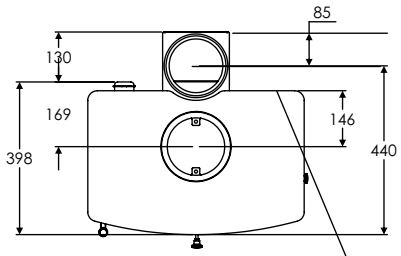

Plan View

Optional Vertical Rear Flue Adapter

156 i/d to suit 150mm (6") flue pipe

Standard Model

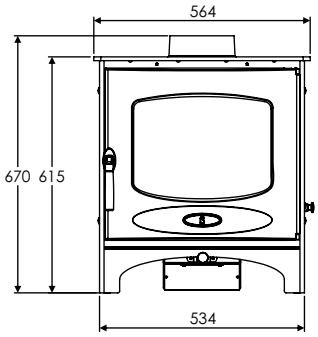

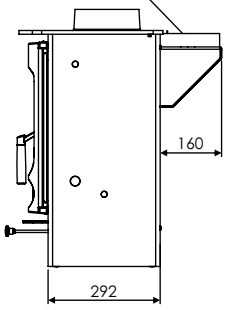

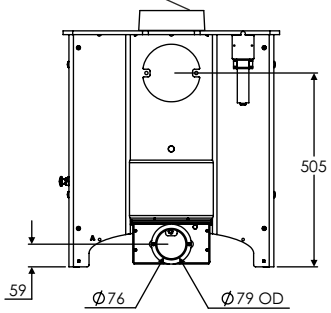

Store Stand

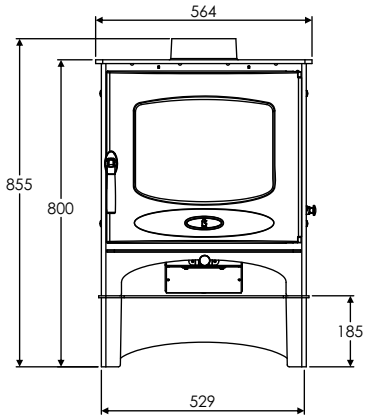

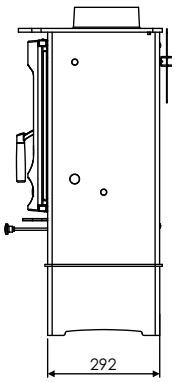

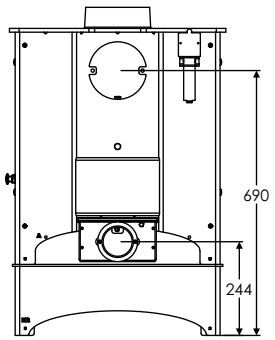

High Leg

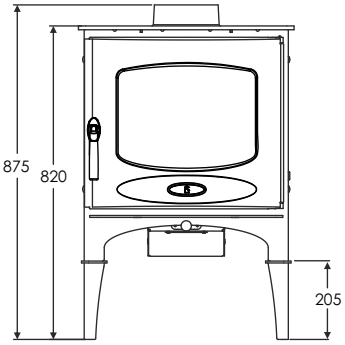

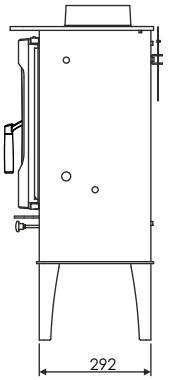

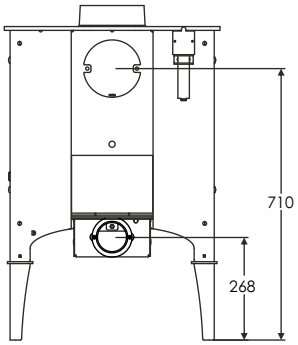

Front **Side** **Rear**

C-EIGHT DIMENSIONS (mm)

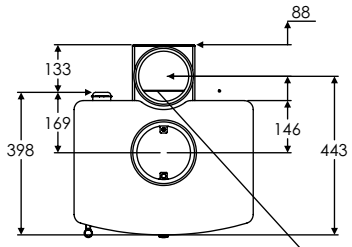

Plan View

Optional Vertical Rear Flue Adapter

156 i/d to suit 150mm (6") flue pipe

Standard Model

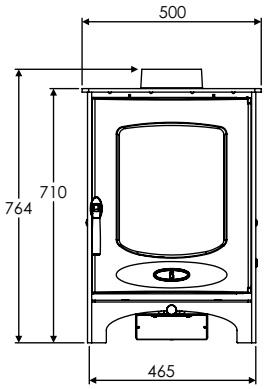

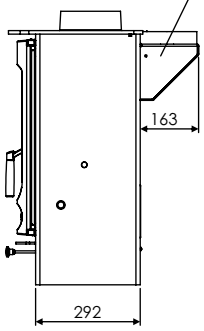

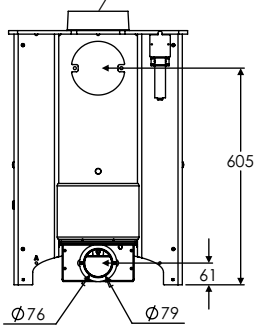

Store Stand

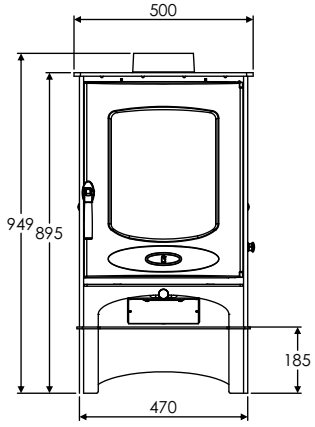

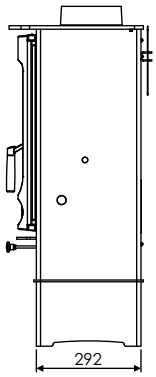

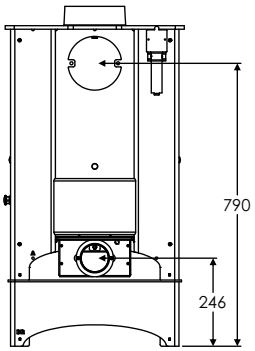

High Leg

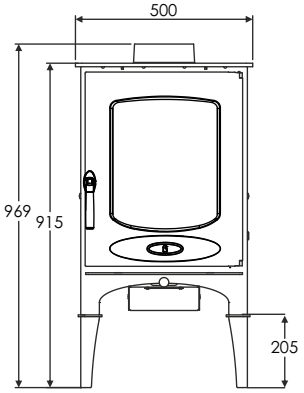

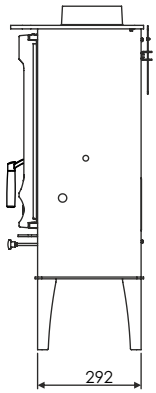

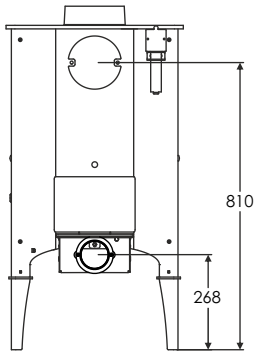

Front **Side** **Rear**

C-FOUR PARTS LIST

Issue B

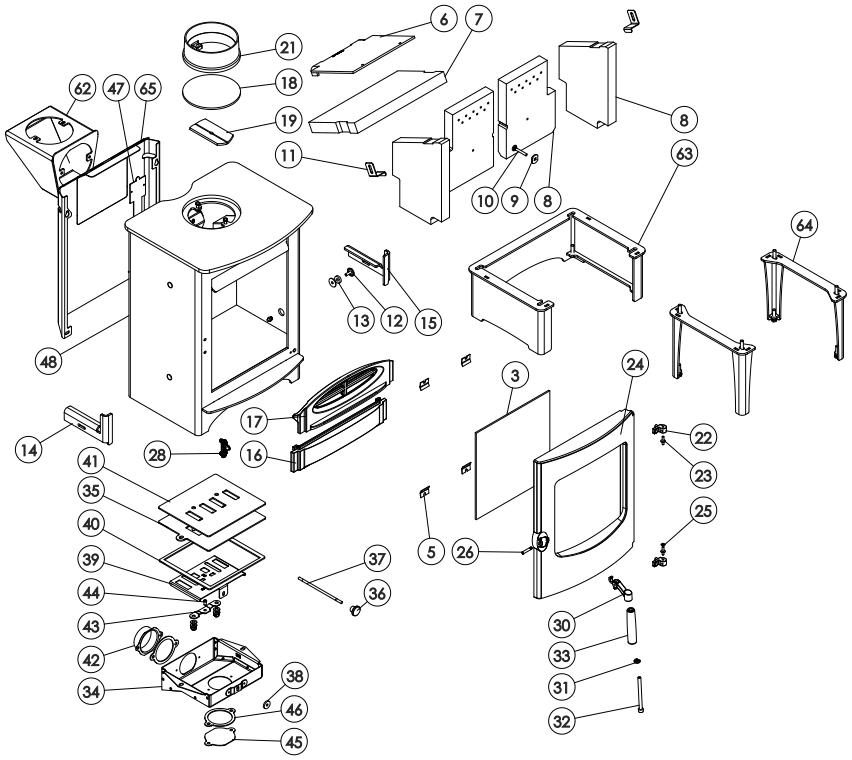

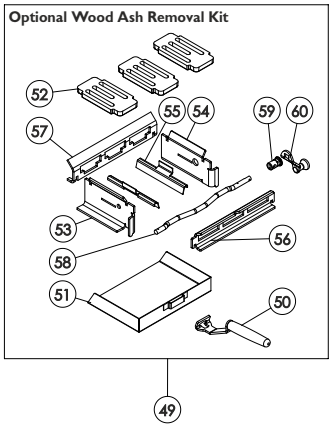

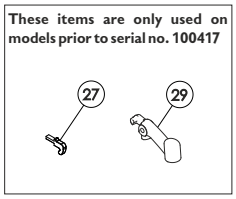

Item	Part No.	Description
1*	008/BR038	Rope Door Seal
2*	008/FW29	Door Seal Adhesive
3	006/PV19	Glass (Inc Seal)
4*	008/PV55	Glass Seal
5	004/KV23	Glass Retainer
6	010/BRE147	Upper Throat Plate
7	011/BRE131	Brick Throat Plate
8	011/BRE148S	Set of Firebricks
9	010/ER036	Brick Retaining Washer
10	008/FFB127	M6x45 Coach Bolt
11	004/XV30	Brick Retaining Bracket
12	004/DY22	Riddler Blanking Disk
13	010/DY24	Riddler blank spacer
14	010/BRE027L	LH Brick and Fence Support
15	010/BRE027R	RH Brick and Fence Support
16	002/BR034	Wood Ash Retainer
17	002/BR017	Fuel Retainer BR
18	012/PV09	Blanking Plate
19	010/EY51	Clamping Plate
20*	008/EY38	Flue Fixing Rope Seal
21#	002/PV12B	Flue Collar
22	002/BR020	Hinge
23	008/ST068/S	Hinge Pin Set
24#	002/BR001/A	Door Assembly
25	008/FFW026	1/4 Heavy Brass Washer
26	004/BR014	Handle Pivot Pin
27	002/PV13	Door Latch
28**	004/BR084	Door Latch
29	002/BR012	Handle Casting
30**	002/BR087	Handle Casting
31	008/FFW015	Spring Washer (Thackery Type)
32	008/FFB007	M8 x 100mm Allen Head Bolt

Item	Part No.	Description
33	008/BR013	Wooden Handle
34	004/BR041	Airbox Cover
35	004/BR005	Air Box Control Plate
36	008/AY37	Air Control Knob
37	004/BR016	Control Rod
38	008/BR052	Felt Washer
39	004/BRE007	Air Inlet Slide
40	008/BR045	Lower Air Box Gasket
41	008/BR006	Airbox Gasket
42	004/BR053	Air Inlet Spigot
43	004/BR015	Clicker Retainer Plate
44	008/ES36/01	Brass Ball Catch
45	004/BR054	Coverplate
46	008/BR044	Blanking Plate Gasket
47	012/BRE011	Serial No. Label
48#	001/BRE010	Firebox
49	010/BRE022	Wood Ash Removal Kit (Optional Extra)
50	012/BV20/A	Ashpan Tool
51	004/PV17	Ashpan
52	002/BRE003	Grate Plate
53	010/BRE004	L.H. Grate Support
54	010/BRE005	R.H. Grate Support
55	004/BRE019	Ash Shedding Plate
56	010/BRE006	Front Grate Support
57	010/BRE009	Rear Grate Support
58	010/EY13	Riddler Rod
59	002/DY21	Riddler Knob
60	008/DY27	Riddling Tool
61*	010/EW51	Ash Carrier (Optional Extra)
62#	010/BU034	Vert Rear Flue Adaptor (Opt'l Extra)
63#	010/BR050	Store Stand (Optional Extra)
64#	010/BR051S	High Legs (Optional Extra)
65#	010/BR057	Heat Shield (Optional Extra)

* These items are not shown on the drawing
** These items are only used on models prior to serial no. 100417
# Please specify colour when ordering.

To obtain spare parts please contact your local stockist giving Model, Part No. and Description. In case of difficulty contact the manufacturer at the address shown.
This drawing is for identification purposes only.

charnwood BISHOPS WAY, NEWPORT, ISLE OF WIGHT PO30 5WS, UNITED KINGDOM
T:+44 (0)1983 537799 • F:+44 (0)1983 537788• WWW.CHARNWOOD.COM

C-FIVE PARTS LIST

Issue D

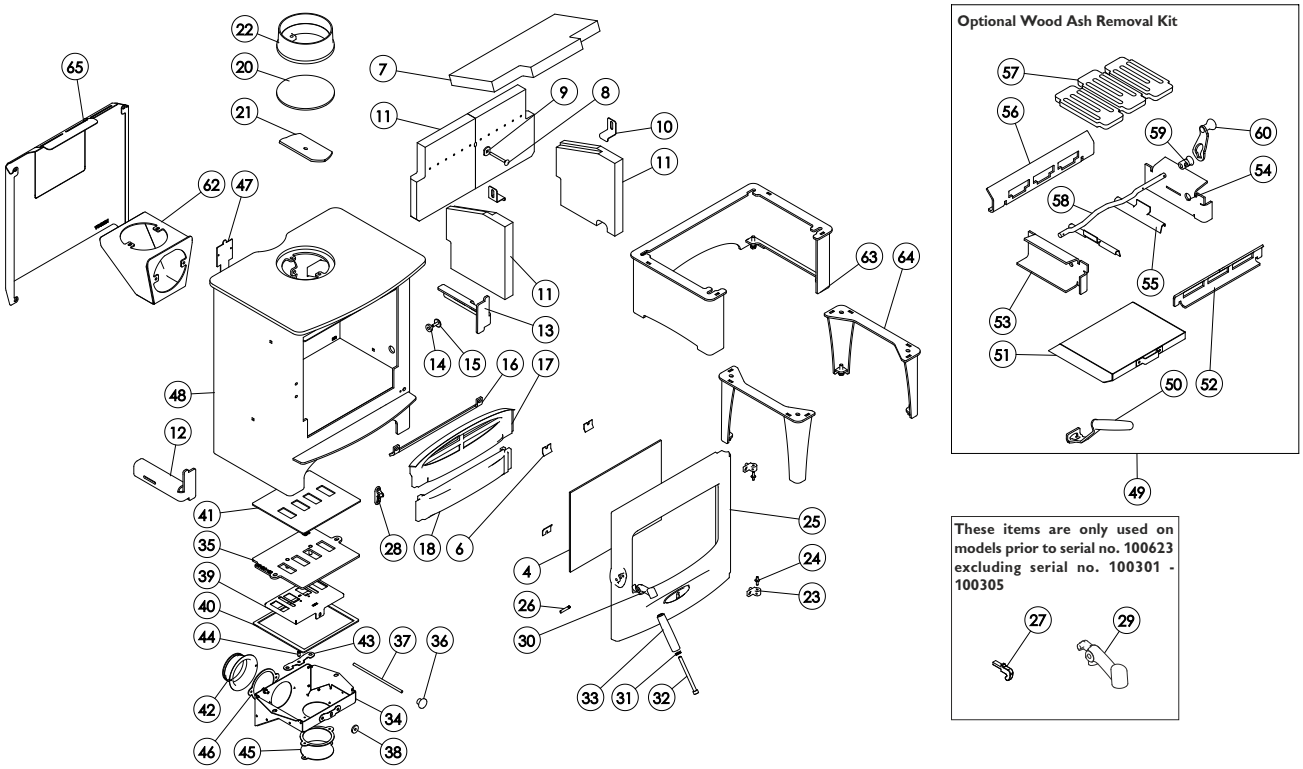

Item	Part No.	Description	Item	Part No.	Description
1*	008/NR039	18mm Rope Door Seal (V2 Door)	33	008/BR013	Wooden Handle
2*	008/NR038	Door Seal (10mm Dia)	34	004/CR041	Air Box Cover
3*	008/FW29	Door Seal Adhesive	35	010/CR005	Air Control Plate
4	006/NR019	Glass	36	008/AY37	Air Control Knob
5*	008/NR044	Glass Seal	37	004/ER016	Control Rod
6	004/KV23	Glass Retainer	38	008/BR052	Felt Washer
7	011/NRE131	Brick Throat Plate	39	004/NRE007	Air Inlet Slide
8	008/FFB125	Coach Bolt M6 x 45	40	008/BR045	Lower Airbox Gasket
9	010/ER036	Brick Retaining Washer	41	008/CR006	Airbox Gasket
10	004/XV30	Brick Bracket	42	008/CR048	Air Inlet Spigot
11	011/NRE130S	Set of Firebricks	43	004/BR015	Clicker Retainer Plate
12	010/NR028	L.H. Brick and Fence Support	44	008/ES36/01	Brass Ball Catch
13	010/NR029	R.H. Brick and Fence Support	45	004/CR064	Coverplate
14	010/DY24	Riddler Blank Spacer	46	008/CR063	Duct Gasket
15	004/DY22	Riddler Hole Plug	47	012/NRE011	Serial No. Label
16	010/NR018	Ash Deflector	48#	001/NR010	Firebox
17	002/NR017	Fuel Retainer	49	010/NR022	Wood Ash Removal Kit (Inc Handle)
18	002/BR034	Wood Ash Retainer	50	012/BV20/A	Ashpan Tool
19*	008/NV38	Flue Fixing Rope Seal	51	004/BR033	Ashpan
20	012/PV09	Blanking Plate	52	010/CRE006	Front Grate Support
21	010/EY51	Clamping Plate	53	010/NR043	L.H. Grate Support
22#	002/PV12B	Flue Collar	54	010/NR042	R.H.Grate Support
23	002/BR020	Hinge Casting	55	004/BRE019	Ash Shedding Plate
24	008/BW39/S	Hinge Pin Set 5mm x 25mm	56	010/NR061	Rear Grate Support
25#	002/NR001/A	Door Assembly	57	002/EY03	Grate Plate
26	004/BR014	Handle Pivot Pin	58	010/DR060	Riddler Rod
27	002/PV13	Door Latch	59	002/DY21	Riddler Knob
28**	004/BR084	Door Latch	60	008/DY27	Riddling Tool
29	002/BR012	Handle Casting	61*	010/EW51	Ash Carrier (Optional Extra)
30**	002/BR087	Handle Casting	62#	010/BU034	Vertical Rear Flue Adapter (Opt'l Extra)
31	008/FFW015	Thackery Washer	63#	010/NR050	Store Stand (Optional Extra)
32	008/FFB007	M8 x 100 Allen Hd Bolt	64#	010 ER051	High Legs (Optional Extra)
			65#	010/NR057	Heat Shield (Optional Extra)

* These items are not shown on the drawing
** These items are only used on models prior to serial no. 100623 excluding serial no. 100301 - 100305
# Please specify colour when ordering.

To obtain spare parts please contact your local stockist giving Model, Part No. and Description. In case of difficulty contact the manufacturer at the address shown.
This drawing is for identification purposes only.

charnwood BISHOPS WAY, NEWPORT, ISLE OF WIGHT PO30 5WS, UNITED KINGDOM
T:+44 (0)1983 537799 • F:+44 (0)1983 537788• WWW.CHARNWOOD.COM

C-SIX PARTS LIST

Issue C

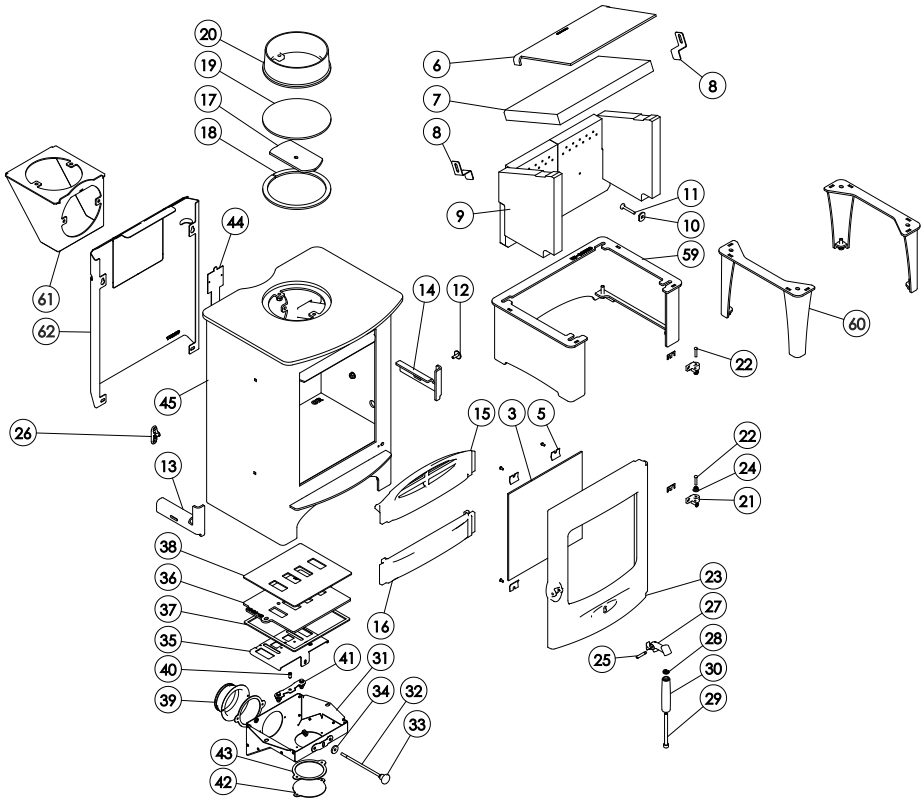

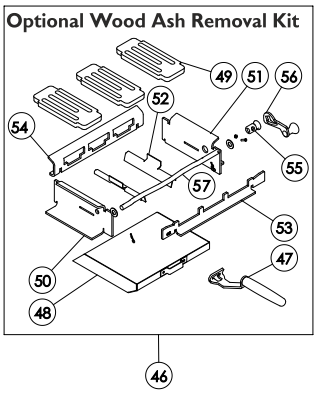

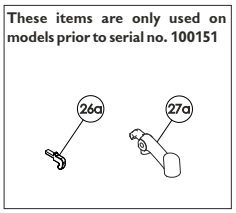

Item	Part No.	Description	Item	Part No.	Description
1*	008/PV21	Rope Door Seal	31	004/CR041	Airbox Cover
2*	008/FW29	Door Seal Adhesive	32	004/BR016	Control Rod
3	006/PV19	Glass (Inc Seal)	33	008/AY37	Air Control Knob
4*	008/PV55	Glass Seal	34	008/BR052	Felt Washer
5	004/KV23	Glass Retainer	35	004/CRE007	Air Inlet Slide
6	010/CRE147	Upper Baffle Plate	36	010/CR005	Air Control Plate
7	011/CRE131	Throat Plate	37	008/BR045	Lower Air Box Gasket
8	004/XV30	Brick Retaining Bracket	38	008/CR006	Airbox Gasket
9	011/CRE130S	Set of Fire Bricks	39	008/CR048	Air Inlet Spigot
10	010/ER036	Brick Retaining Washer	40	008/ES36/01	Brass Ball Catch
11	008/FFB127	M6x45 Coach Bolt	41	004/BR015	Clicker Retainer Plate
12	004/DY22	Riddler Blanking Disk	42	004/CR064	Coverplate
13	010/CRE027L	LH Brick and Fence Support	43	008/CR063	Duct Gasket
14	010/CRE027R	RH Brick and Fence Support	44	012/CRE011	Serial No. Label
15	002/BR017	Fuel Retainer	45#	001/CRE010	Firebox
16	002/BR034	Wood Ash Retainer	46	010/CRE022	Grate Kit (Inc Handle)
17	010/AY51	Clamping Plate	47	012/BV20/A	Ashpan Tool
18	008/NV38	Flue Fixing Rope Seal	48	004/BR033	Ashpan
19	012/TW09	Blanking Plate	49	002/EY03	Grate Plate
20#	002/CH12B	Flue Collar	50	010/CRE043	L.H. Grate Support
21	002/BR020	Hinge	51	010/CRE042	R.H. Grate Support
22	008/ST068/S	Hinge Pin Set	52	004/BRE019	Ash Shedding Plate
23#	002/BR001/A	Door Assembly	53	010/CRE006	Front Grate Support
24	008/FFW026	1/4 Heavy Brass Washer	54	010/CRE061	Rear Grate Support
25	004/BR014	Handle Pivot Pin	55	002/DY21	Riddler Knob
26	004/BR084	Door Latch	56	008/DY27	Riddling Tool
26a**	002/PV13	Door Latch	57	010/CR013	Riddler Rod
27	002/BR087	Handle Casting	58*	010/EW51	Ash Carrier (Opt'l Extra)
27a**	002/BR012	Handle Casting	59#	010/CR050	Store Stand (Optional Extra)
28	008/FFW015	Thackery Washer	60#	010/ER051	High Legs (Optional Extra)
29	008/FFB007	M8 x 100 Allen Hd Bolt	61#	010/TW33	Vert Rear Flue Adaptor (Opt'l Extra)
30	008/BR013	Wooden Handle	62#	010/CR057	Heat Shield (Optional Extra)

* These items are not shown on the drawing
** These items are only used on models prior to serial no. 100151
# Please specify colour when ordering.

To obtain spare parts please contact your local stockist giving Model, Part No. and Description. In case of difficulty contact the manufacturer at the address shown.
This drawing is for identification purposes only.

charnwood BISHOPS WAY, NEWPORT, ISLE OF WIGHT PO30 5WS, UNITED KINGDOM
T:+44 (0)1983 537799 • F:+44 (0)1983 537788• WWW.CHARNWOOD.COM

C-SEVEN PARTS LIST

Issue C

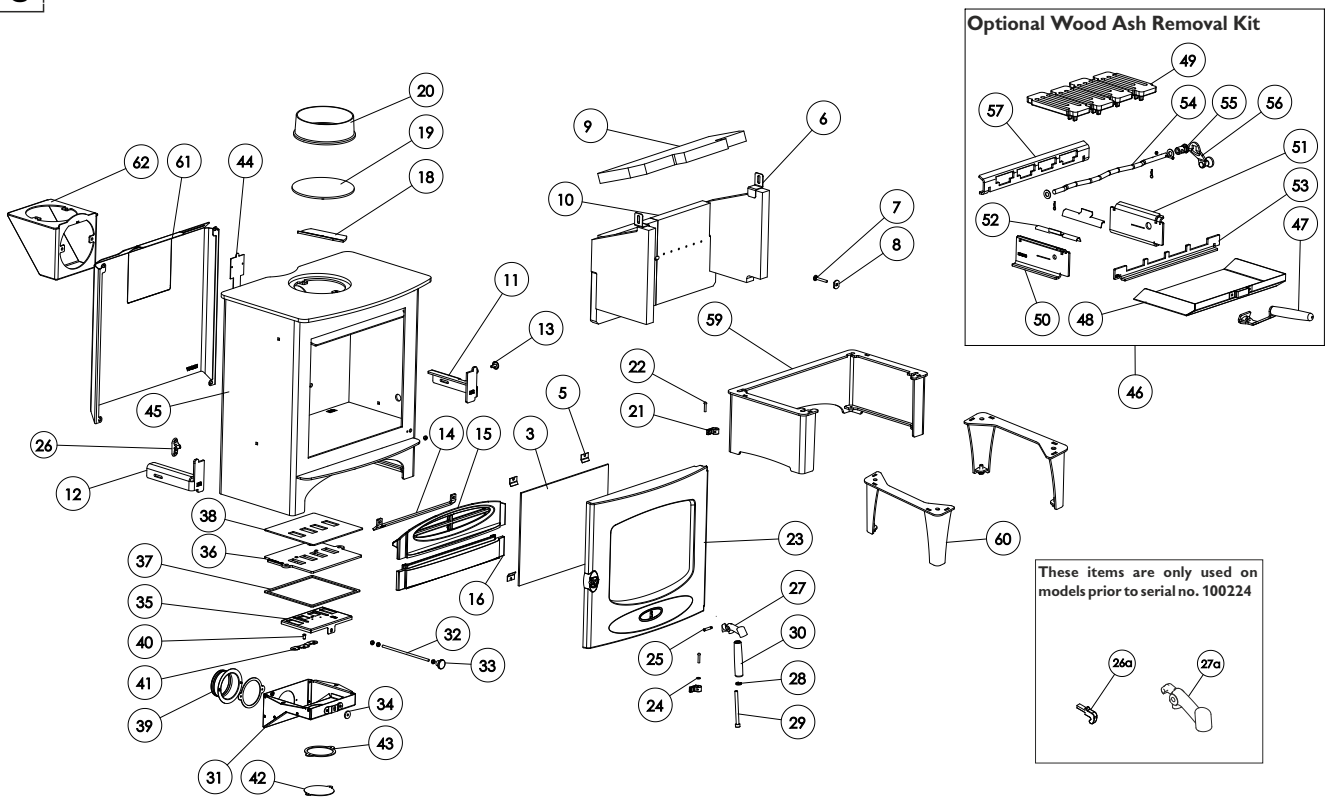

Item	Part No.	Description
1*	008/ER003	Door Seal (10mm Dia)
1a*	008/ER038	Door Seal (18mm Dia)
2*	008/FW29	Door Seal Adhesive
3	006/ER019	Glass
4*	008/ER044	Glass Seal
5	004/KV23	Glass Retainer
6	004/XV30	Brick Bracket
7	008/FFB125	Coach Bolt M6 x 45
8	010/ER036	Brick Retaining Washer
9	011/ERE131	Brick Baffle
10	011/ERE130S	Set of Fire Bricks (4)
11	010/ER029	R.H. Brick and Fence Support
12	010/ER028	L.H. Brick and Fence Support
13	004/DY22	Riddler Hole Plug
14	010/ER018	Ash Deflector
15	002/ER017	Fuel Retainer
16	002/ER034	Wood Ash Retainer
17a*	008/NV38	Flue Fixing Rope Seal
18	010/AY51	Clamping Plate
19	012/TW09	Blanking Plate
20#	002/CH12B	Flue Collar
21	002/BR020	Hinge
22	008/ST068/S	Hinge Pin Set 5mm x 25mm
23#	002/ER001/A	Door Assembly
24	008/FFW026	M6 Heavy Brass Washer
25	004/BR014	Handle Pivot Pin
26	004/BR084	Door Latch
26a**	002/PV13	Door Latch
27	002/BR087	Handle Casting
27a**	002/BR012	Handle Casting
28	008/FFW015	Thackery Washer
29	008/FFB007	M8 x 100 Allen Hd Bolt
30	008/BR013	Wooden Door Handle

Item	Part No.	Description
31	004/CR041	AirBox Cover
32	004/ER016	Control Rod
33	008/AY37	Air Control Knob
34	008/BR052	Felt Washer
35	004/ER007	Air Inlet Slide
36	010/CR005	Air Control Plate
37	008/BR045	Airbox Gasket
38	008/CR006	Air Box Gasket(Upper)
39	008/CR048	Air Inlet Spigot
40	008/ES36/01	Brass Ball Catch
41	004/BR015	Clicker Retainer Plate
42	004/CR064	Coverplate
43	008/CR063	Duct Gasket
44	012/ERE011	Serial No. Label
45	001/ER010	Firebox
46	010/ER022	Wood Ash Removal Kit (Inc Handle)
47	012/BV20/A	Ashpan Tool
48	004/ER033	Ashpan
49	002/EY03	Grate Plate
50	010/ER043	L.H. Grate Support
51	010/ER042	R.H.Grate Support
52	004/BRE019	Ash Shedding Plate
53	010/ER065	Front Grate Support
54	010/ER060	Riddler Rod
55	002/DY21	Riddler Knob
56	008/DY27	Riddling Tool
57	010/ER061	Rear Grate Support
58*	010/BW51	Ash Carrier (Optional Extra)
59#	010/ER050	Store Stand (Optional Extra)
60#	010/ER051	High Legs (Optional Extra)
61#	010/ER057	Heat Shield (Optional Extra)
62#	010/TW33	Vertical Rear Flue Adapter (Opt'l Extra)

* These items are not shown on the drawing
** These items are only used on models prior to serial no. 100224
# Please specify colour when ordering.

To obtain spare parts please contact your local stockist giving Model, Part No. and Description. In case of difficulty contact the manufacturer at the address shown.
This drawing is for identification purposes only.

charnwood BISHOPS WAY, NEWPORT, ISLE OF WIGHT PO30 5WS, UNITED KINGDOM
T:+44 (0)1983 537799 • F:+44 (0)1983 537788• WWW.CHARNWOOD.COM

C-EIGHT PARTS LIST

Issue B

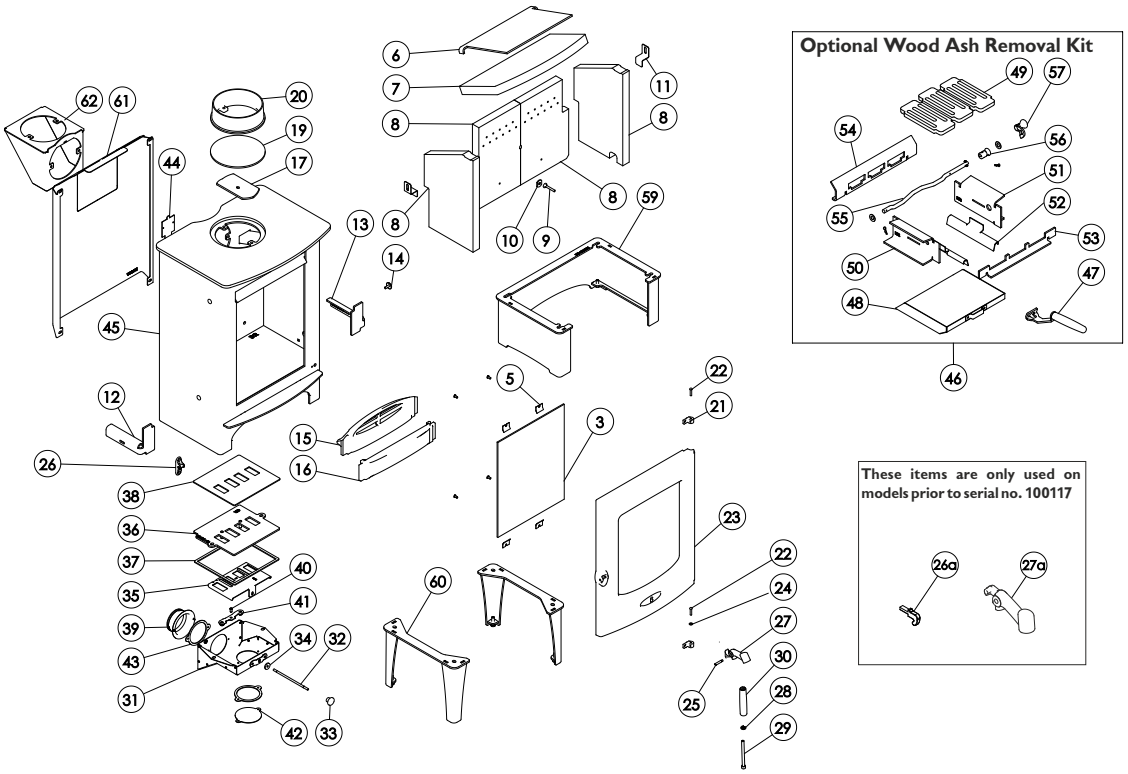

Item	Part No.	Description
1*	008/DR038	Rope Door Seal (10mm Dia)
1a*	008/DR039	Rope Door Seal (18mm Dia)
2*	008/FW29	Door Seal Adhesive
3	006/DR019	Glass (Inc Seal)
4*	008/DR091	Glass Seal
5	004/KV23	Glass Retainer
6	010/DRE147	Upper Throat Plate
7	011/DRE131	Brick Throat Plate
8	011/DRE130S	Set of Fire Bricks
9	008/FFB127	M6 x 45 Coach Bolt
10	010/ER036	Brick Retaining Washer
11	004/XV30	Brick Retaining Bracket
12	010/DRE027L	LH Brick and Fence Support
13	010/DRE027R	RH Brick and Fence Support
14	004/DY22	Riddler Blanking Disk
15	002/BR017	Fuel Retainer
16	002/BR034	Wood Ash Retainer
17	010/AY51	Clamping Plate
18*	008/NV38	Flue Fixing Rope Seal
19	012/TW09	Blanking Plate
20#	002/CH12B	Flue Collar
21	002/BR020	Hinge
22	008/ST068/S	Hinge Pin Set
23#	002/DR001/A	Door Assembly
24	008/FFW026	1/4 Heavy Brass Washer
25	004/BR014	Handle Pivot Pin
26	004/BR084	Door Latch
26a	002/PV13	Door Latch
27	002/BR087	Handle Casting
27a	002/BR012	Handle Casting
28	008/FFW015	Spring Washer (Thackery Type)
29	008/FFB007	M8 x 100mm Allen Head Bolt
30	008/BR013	Wooden Handle

Item	Part No.	Description
31	004/CR041	Airbox Cover
32	004/BR016	Control Rod
33	008/AY37	Air Control Knob
34	008/BR052	Felt Washer
35	004/DRE007	Air Inlet Slide
36	010/CR005	Air Control Plate
37	008/BR045	Air Box Gasket
38	008/CR006	Airbox Gasket (Upper)
39	004/CR048	Air Inlet Spigot
40	008/ES36/01	Brass Ball Catch
41	004/BR015	Clicker Retainer Plate
42	004/CR064	Coverplate
43	008/CR063	Duct Gasket
44	012/DRE011	Serial No. Label
45#	001/DRE010	Firebox
46	010/DRE022	Wood Ash Removal Kit (Inc Handle)
47	012/BV20/A	Ashpan Tool
48	004/BR033	Ashpan
49	002/EY03	Grate Plate
50	010/DRE043	L.H. Grate Support
51	010/DRE042	R.H. Grate Support
52	004/DRE019	Ash Shedding Plate
53	010/DRE006	Front Grate Support
54	010/DRE061	Rear Grate Support
55	010/DR060	Riddler Rod
56	002/DY21	Riddler Knob
57	008/DY27	Riddling Tool
58*	010/EW51	Ash Carrier (Optional Extra)
59#	010/DR050	Store Stand (Optional Extra)
60#	010/ER051	High Legs (Optional Extra)
61#	010/DR057	Heat Shield (Optional Extra)
62#	010/TW33	Vert Rear Flue Adaptor (Opt'l Extra)

* These items are not shown on the drawing
** These items are only used on models prior to serial no. 100117
# Please specify colour when ordering.

To obtain spare parts please contact your local stockist giving Model, Part No. and Description. In case of difficulty contact the manufacturer at the address shown.
This drawing is for identification purposes only.

charnwood BISHOPS WAY, NEWPORT, ISLE OF WIGHT PO30 5WS, UNITED KINGDOM
T:+44 (0)1983 537799 • F:+44 (0)1983 537788• WWW.CHARNWOOD.COM

charnwood

(EU)2015/1185 - (EU)2015/1186

Model identifier(s): Charnwood C-Four Blu
Indirect heating functionality: No
Direct heat output: 4.8(kW)
Indirect heat output: - (kW)

Test laboratory: RRF
Notified body no: 1625
Test report no: 40 15 3969-1
Harmonized standard: EN 13240

TECHNICAL INFORMATION FOR SOLID FUEL LOCAL SPACE HEATERS

Fuel	**Preferred fuel (only one):**	**Other suitable fuel(s):**
Wood logs with moisture content ≤ 25 %	Yes	No
Compressed wood with moisture content < 12 %	No	No
Other woody biomass	No	No
Non-woody biomass	No	No
Anthracite and dry steam coal	No	No
Hard coke	No	No
Low temperature coke	No	No
Bituminous coal	No	No
Lignite briquettes	No	No
Peat briquettes	No	No
Blended fossil fuel briquettes	No	No
Other fossil fuel	No	No
Blended biomass and fossil fuel briquettes	No	No
Other blend of biomass and solid fuel	No	No

Characteristics when operating with the preferred fuel			
Seasonal space heating energy efficiency ηs [%]: 74			
Energy Efficiency Index (EEI): 109.9			
Item	**Symbol**	**Value**	**Unit**
Heat output			
Nominal heat output	P_{nom}	4.8	kW
Minimum heat output (indicative)	P_{min}	-	kW

Auxiliary electricity consumption			
At nominal heat output	[N.A.]	[N.A.]	[N.A.]
At minimum heat output	[N.A.]	[N.A.]	[N.A.]
In standby mode	[N.A.]	[N.A.]	[N.A.]

Permanent pilot flame power requirement			
Pilot flame power requirement (if applicable)	[N.A.]	[N.A.]	[N.A.]

Characteristics when only the preferred fuel is used				
Space heating emissions (mg/Nm³ at 13% O2)	**CO**	**NOX**	**OGC**	**PM**
at nominal heat output	1000	92	87	16
at minimum heat output	-	-	-	-

Observe the specific installation, assembly and maintenance precautions listed in the manual supplied with the product, as well as applicable national and local regulations. All the materials and components used to make our stoves (with the exception of the firebrick, ceramic gaskets and glass) are fully recyclable through your local municipal recycling facility.

Useful efficiency (NCV as received)			
Item	**Symbol**	**Value**	**Unit**
Useful efficiency at nominal heat output	ηth,nom	82	%
Useful efficiency at minimum heat output (indicative)	ηth,nom	-	%

Type of heat output/room temperature control (select one)	
single stage heat output, no room temperature control	Yes
two or more manual stages, no room temperature control	No
with mechanic thermostat room temperature control	No
with electronic room temperature control	No
with electronic room temperature control plus day timer	No
with electronic room temperature control plus day timer	No
Other control options (multiple selections possible)	
room temperature control, with presence detection	No
room temperature control, with open window detection	No
with distance control option	No

Contact details: Charnwood,
Bishops Way,
Newport,
Isle of Wight,
PO30 5WS
UK

A. J. WELLS & SONS
BISHOPS WAY
NEWPORT
ISLE OF WIGHT
PO30 5WS
TEL. (01983) 827552
FAX. (01983) 821367

charnwood

(EU)2015/1185 - (EU)2015/1186

Model identifier(s): Charnwood C-Five Blu
Indirect heating functionality: No
Direct heat output: 5(kW)
Indirect heat output: - (kW)

Test laboratory: Cetiat
Notified body no: 1623
Test report no: BOI 1414385-1
Harmonized standard: EN 13240

TECHNICAL INFORMATION FOR SOLID FUEL LOCAL SPACE HEATERS

Fuel	**Preferred fuel (only one):**	**Other suitable fuel(s):**
Wood logs with moisture content ≤ 25 %	Yes	No
Compressed wood with moisture content < 12 %	No	No
Other woody biomass	No	No
Non-woody biomass	No	No
Anthracite and dry steam coal	No	No
Hard coke	No	No
Low temperature coke	No	No
Bituminous coal	No	No
Lignite briquettes	No	No
Peat briquettes	No	No
Blended fossil fuel briquettes	No	No
Other fossil fuel	No	No
Blended biomass and fossil fuel briquettes	No	No
Other blend of biomass and solid fuel	No	No

Characteristics when operating with the preferred fuel			
Seasonal space heating energy efficiency ηs [%]: 74			
Energy Efficiency Index (EEI): 109.9			
Item	**Symbol**	**Value**	**Unit**
Heat output			
Nominal heat output	P_{nom}	5	kW
Minimum heat output (indicative)	P_{min}	-	kW

Auxiliary electricity consumption			
At nominal heat output	[N.A.]	[N.A.]	[N.A.]
At minimum heat output	[N.A.]	[N.A.]	[N.A.]
In standby mode	[N.A.]	[N.A.]	[N.A.]

Permanent pilot flame power requirement			
Pilot flame power requirement (if applicable)	[N.A.]	[N.A.]	[N.A.]

Characteristics when only the preferred fuel is used				
Space heating emissions (mg/Nm³ at 13% O2)	**CO**	**NOX**	**OGC**	**PM**
at nominal heat output	750	130	90	30
at minimum heat output	-	-	-	-

Observe the specific installation, assembly and maintenance precautions listed in the manual supplied with the product, as well as applicable national and local regulations. All the materials and components used to make our stoves (with the exception of the firebrick, ceramic gaskets and glass) are fully recyclable through your local municipal recycling facility.

Useful efficiency (NCV as received)			
Item	**Symbol**	**Value**	**Unit**
Useful efficiency at nominal heat output	ηth,nom	82	%
Useful efficiency at minimum heat output (indicative)	ηth,nom	-	%

Type of heat output/room temperature control (select one)	
single stage heat output, no room temperature control	Yes
two or more manual stages, no room temperature control	No
with mechanic thermostat room temperature control	No
with electronic room temperature control	No
with electronic room temperature control plus day timer	No
with electronic room temperature control plus day timer	No
Other control options (multiple selections possible)	
room temperature control, with presence detection	No
room temperature control, with open window detection	No
with distance control option	No

Contact details: Charnwood,
Bishops Way,
Newport,
Isle of Wight,
PO30 5WS
UK

A. J. WELLS & SONS
BISHOPS WAY
NEWPORT
ISLE OF WIGHT
PO30 5WS
TEL. (01983) 827552
FAX. (01983) 821367

charnwood

(EU)2015/1185 - (EU)2015/1186

Model identifier(s): Charnwood C-Six Blu
Indirect heating functionality: No
Direct heat output: 5.9(kW)
Indirect heat output: - (kW)

Test laboratory: RRF
Notified body no: 1625
Test report no: 40 15 411-2
Harmonized standard: EN 13240

TECHNICAL INFORMATION FOR SOLID FUEL LOCAL SPACE HEATERS

Fuel	**Preferred fuel (only one):**	**Other suitable fuel(s):**
Wood logs with moisture content ≤ 25 %	Yes	No
Compressed wood with moisture content < 12 %	No	No
Other woody biomass	No	No
Non-woody biomass	No	No
Anthracite and dry steam coal	No	No
Hard coke	No	No
Low temperature coke	No	No
Bituminous coal	No	No
Lignite briquettes	No	No
Peat briquettes	No	No
Blended fossil fuel briquettes	No	No
Other fossil fuel	No	No
Blended biomass and fossil fuel briquettes	No	No
Other blend of biomass and solid fuel	No	No

Characteristics when operating with the preferred fuel			
Seasonal space heating energy efficiency ηs [%]: 74			
Energy Efficiency Index (EEI): 109.9			
Item	**Symbol**	**Value**	**Unit**
Heat output			
Nominal heat output	P_{nom}	5.9	kW
Minimum heat output (indicative)	P_{min}	-	kW

Auxiliary electricity consumption			
At nominal heat output	[N.A.]	[N.A.]	[N.A.]
At minimum heat output	[N.A.]	[N.A.]	[N.A.]
In standby mode	[N.A.]	[N.A.]	[N.A.]

Permanent pilot flame power requirement			
Pilot flame power requirement (if applicable)	[N.A.]	[N.A.]	[N.A.]

Characteristics when only the preferred fuel is used				
Space heating emissions (mg/Nm³ at 13% O2)	**CO**	**NOX**	**OGC**	**PM**
at nominal heat output	875	113	72	33
at minimum heat output	-	-	-	-

Observe the specific installation, assembly and maintenance precautions listed in the manual supplied with the product, as well as applicable national and local regulations. All the materials and components used to make our stoves (with the exception of the firebrick, ceramic gaskets and glass) are fully recyclable through your local municipal recycling facility.

Useful efficiency (NCV as received)			
Item	**Symbol**	**Value**	**Unit**
Useful efficiency at nominal heat output	ηth,nom	82	%
Useful efficiency at minimum heat output (indicative)	ηth,nom	-	%

Type of heat output/room temperature control (select one)	
single stage heat output, no room temperature control	Yes
two or more manual stages, no room temperature control	No
with mechanic thermostat room temperature control	No
with electronic room temperature control	No
with electronic room temperature control plus day timer	No
with electronic room temperature control plus day timer	No
Other control options (multiple selections possible)	
room temperature control, with presence detection	No
room temperature control, with open window detection	No
with distance control option	No

Contact details: Charnwood,
Bishops Way,
Newport,
Isle of Wight,
PO30 5WS
UK

A. J. WELLS & SONS
BISHOPS WAY
NEWPORT
ISLE OF WIGHT
PO30 5WS
TEL. (01983) 827552
FAX. (01983) 821367

charnwood

(EU)2015/1185 - (EU)2015/1186

Model identifier(s): Charnwood C-Seven Blu
Indirect heating functionality: No
Direct heat output: 7.1(kW)
Indirect heat output: - (kW)

Test laboratory: Cetiat
Notified body no: 1623
Test report no: BOI 1414385-2
Harmonized standard: EN 13240

TECHNICAL INFORMATION FOR SOLID FUEL LOCAL SPACE HEATERS

Fuel	**Preferred fuel (only one):**	**Other suitable fuel(s):**
Wood logs with moisture content ≤ 25 %	Yes	No
Compressed wood with moisture content < 12 %	No	No
Other woody biomass	No	No
Non-woody biomass	No	No
Anthracite and dry steam coal	No	No
Hard coke	No	No
Low temperature coke	No	No
Bituminous coal	No	No
Lignite briquettes	No	No
Peat briquettes	No	No
Blended fossil fuel briquettes	No	No
Other fossil fuel	No	No
Blended biomass and fossil fuel briquettes	No	No
Other blend of biomass and solid fuel	No	No

Characteristics when operating with the preferred fuel			
Seasonal space heating energy efficiency ηs [%]: 71			
Energy Efficiency Index (EEI): 105.6			
Item	**Symbol**	**Value**	**Unit**
Heat output			
Nominal heat output	P_{nom}	7.1	kW
Minimum heat output (indicative)	P_{min}	-	kW

Auxiliary electricity consumption			
At nominal heat output	[N.A.]	[N.A.]	[N.A.]
At minimum heat output	[N.A.]	[N.A.]	[N.A.]
In standby mode	[N.A.]	[N.A.]	[N.A.]

Permanent pilot flame power requirement			
Pilot flame power requirement (if applicable)	[N.A.]	[N.A.]	[N.A.]

Characteristics when only the preferred fuel is used				
Space heating emissions (mg/Nm³ at 13% O2)	**CO**	**NOX**	**OGC**	**PM**
at nominal heat output	875	60	100	25
at minimum heat output	-	-	-	-

Observe the specific installation, assembly and maintenance precautions listed in the manual supplied with the product, as well as applicable national and local regulations. All the materials and components used to make our stoves (with the exception of the firebrick, ceramic gaskets and glass) are fully recyclable through your local municipal recycling facility.

Useful efficiency (NCV as received)			
Item	**Symbol**	**Value**	**Unit**
Useful efficiency at nominal heat output	ηth,nom	79	%
Useful efficiency at minimum heat output (indicative)	ηth,nom	-	%

Type of heat output/room temperature control (select one)	
single stage heat output, no room temperature control	Yes
two or more manual stages, no room temperature control	No
with mechanic thermostat room temperature control	No
with electronic room temperature control	No
with electronic room temperature control plus day timer	No
with electronic room temperature control plus day timer	No
Other control options (multiple selections possible)	
room temperature control, with presence detection	No
room temperature control, with open window detection	No
with distance control option	No

Contact details: Charnwood,
Bishops Way,
Newport,
Isle of Wight,
PO30 5WS
UK

A. J. WELLS & SONS
BISHOPS WAY
NEWPORT
ISLE OF WIGHT
PO30 5WS
TEL. (01983) 527582
FAX. (01983) 821367

charnwood

(EU)2015/1185 - (EU)2015/1186

Model identifier(s): Charnwood C-Eight Blu
Indirect heating functionality: No
Direct heat output: 8(kW)
Indirect heat output: - (kW)

Test laboratory: RRF
Notified body no: 1625
Test report no: 40 15 3886
Harmonized standard: EN 13240

TECHNICAL INFORMATION FOR SOLID FUEL LOCAL SPACE HEATERS

Fuel	**Preferred fuel (only one):**	**Other suitable fuel(s):**
Wood logs with moisture content ≤ 25 %	Yes	No
Compressed wood with moisture content < 12 %	No	No
Other woody biomass	No	No
Non-woody biomass	No	No
Anthracite and dry steam coal	No	No
Hard coke	No	No
Low temperature coke	No	No
Bituminous coal	No	No
Lignite briquettes	No	No
Peat briquettes	No	No
Blended fossil fuel briquettes	No	No
Other fossil fuel	No	No
Blended biomass and fossil fuel briquettes	No	No
Other blend of biomass and solid fuel	No	No

Characteristics when operating with the preferred fuel			
Seasonal space heating energy efficiency ηs [%]: 73			
Energy Efficiency Index (EEI): 108.5			
Item	**Symbol**	**Value**	**Unit**
Heat output			
Nominal heat output	P_{nom}	8	kW
Minimum heat output (indicative)	P_{min}	-	kW

Auxiliary electricity consumption			
At nominal heat output	[N.A.]	[N.A.]	[N.A.]
At minimum heat output	[N.A.]	[N.A.]	[N.A.]
In standby mode	[N.A.]	[N.A.]	[N.A.]

Permanent pilot flame power requirement			
Pilot flame power requirement (if applicable)	[N.A.]	[N.A.]	[N.A.]

Characteristics when only the preferred fuel is used				
Space heating emissions (mg/Nm³ at 13% O2)	**CO**	**NOX**	**OGC**	**PM**
at nominal heat output	875	118	96	30
at minimum heat output	-	-	-	-

Observe the specific installation, assembly and maintenance precautions listed in the manual supplied with the product, as well as applicable national and local regulations. All the materials and components used to make our stoves (with the exception of the firebrick, ceramic gaskets and glass) are fully recyclable through your local municipal recycling facility.

Useful efficiency (NCV as received)			
Item	**Symbol**	**Value**	**Unit**
Useful efficiency at nominal heat output	ηth,nom	81	%
Useful efficiency at minimum heat output (indicative)	ηth,nom	-	%

Type of heat output/room temperature control (select one)	
single stage heat output, no room temperature control	Yes
two or more manual stages, no room temperature control	No
with mechanic thermostat room temperature control	No
with electronic room temperature control	No
with electronic room temperature control plus day timer	No
with electronic room temperature control plus day timer	No
Other control options (multiple selections possible)	
room temperature control, with presence detection	No
room temperature control, with open window detection	No
with distance control option	No

Contact details: Charnwood,
Bishops Way,
Newport,
Isle of Wight,
PO30 5WS
UK

A. J. WELLS & SONS
BISHOPS WAY
NEWPORT
ISLE OF WIGHT
PO30 5WS
TEL. (01983) 527582
FAX. (01983) 821367

your premier dealer

charnwood BISHOPS WAY, NEWPORT, ISLE OF WIGHT PO30 5WS, UNITED KINGDOM

T:+44 (0)1983 537777 • F:+44 (0)1983 537788 • CONTACT US AT WWW.CHARNWOOD.COM

A Division of A.J.Wells & Sons Limited Registered in England No. 03809371